
CONTROL PANEL

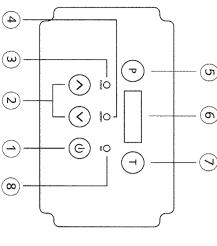

- 1. ON/OFF Key
- 2. Humidity setting UP/DOWN
- Purging Indicator
- 4. Defrosting Indicator
- PURGE Key
- 6. HUMIDITY and TIME Display
- 7. TIME Key
- 8. Operating Indicator
- (b) ON/OFF: Press the ON/OFF key to turn the unit ON or OFF.
- 2. (**A**) and (**Y**):

Press 🗪 or 🗨 key to set or adjust humidity in the range between 26% and 90%. When the ambient humidity is below 26% "CO" will be displayed (CO = continuous operation).

4. Defrost Indicator

If necessary, the unit will go into defrosting mode. If this happens, the defrost indicator light illuminates. When defrosting is finished, the unit will return to dehumidifying mode again; the light goes off.

- 5. (P) PURGE: Press the PURGE key to empty water from the pump reservoir. During normal operation the pump purges automatically when the reservoir is full. Use 'PURGE' before moving the unit to avoid water spillage. The pump will close automatically after forty seconds continuous operation.
- T TIME: Press once to show current working time. Another push will show the total working time of the appliance.

Current working time can be reset by pressing and holding the T key. However the time that has passed will be added to the total working time.

The total working time cannot be reset.

The time can be viewed even if the appliance is not connected to the mains.

OPERATING INSTRUCTIONS

A. Operation for General Use

- Press the ON/OFF key to turn the unit on, it will get into working mode automatically.
- After using, press ON/OFF key to turn the unit off. The water pump will turn on automatically for 40 seconds to drain the rest of the water, and then turn off automatically.

Attention:

DO NOT switch the power OFF by disconnecting at the mains socket outlet.

To avoid water spillage; **DO NOT** move the dehumidifier for at least three minutes after turning the power **OFF**.


B. Key Lock Function

If the "T" and "P" keys are pressed for 2s at the same time, the operating indicator "RUN" will flash fast, and all the keys on the control panel will be locked. To unlock repeat the same procedure.

C. Pipe Function

In a very moist space, use a plastic pipe with a diameter larger than the internal diameter of pipe for BR55C/BR85C is 150/164 mm, and connect the pipe to the hood This is a faster and more effective way of dehumidifying.

Model BR55C BR85C Pipe connection 150 164

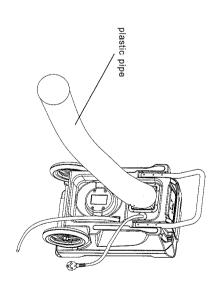


CARE AND MAINTENANCE

Cleaning the Air Filter

Ensure the dehumidifier is turned OFF and the plug is removed from the power socket before maintenance is carried out.

The working performance of dehumidifier will be greatly reduced if the filters become blocked.

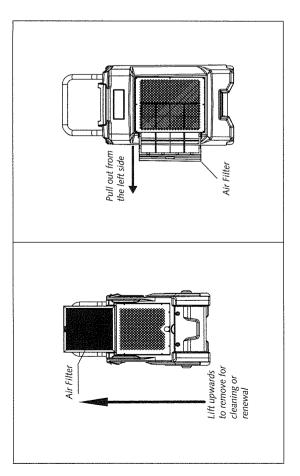


- 1. Remove the filter as showed in the images above.
- Vacuum any debris from the filter using the vacuum hose and nozzle attachment.
- 3. Use lukewarm water and a mild detergent to wash the filter and allow to dry.
- 4. Once dry, re-install filter into the dehumidifier.

Checking the Drain Hose

• Unplug the drain hose and check that there are no obstructions. If so, replace the hose to avoid water spills.

DRAINAGE

- The dehumidifier pump connects to plastic drainage hose. The hose is stored on the back of the appliance. Uncoil the entire hose ensuring there are no kinks or restrictions and place the unattached end into a water vessel or run to outdoors.
- Ensure that water which runs to outdoors does NOT create a slip hazard.
- Water vessels MUST be checked regularly where used.
- The position of the drain water pipe must not be too high (<4.5 metres). Failure to do so may cause a water backup in the pump, resulting in leakage.

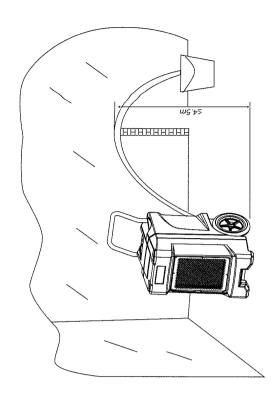


SETTING UP INSTRUCTIONS

/ IMPORTANT

Place the dehumidifier in upright position. When transporting a dehumidifier to site, allow the dehumidifier to stand for 30 minutes before switching ON. This is necessary to allow the refrigerant system to stabilise and avoid system damage.


Operate the dehumidifier in an enclosed area, as this creates a drying chamber. Close all doors, windows or areas that open to external areas, to maximize the dehumidifier's water removal efficiency. Keep traffic through the drying chamber to a minimum. Place the dehumidifier in the centre of the room, away from walls and furnishings. DO NOT allow the airflows to be obstructed.

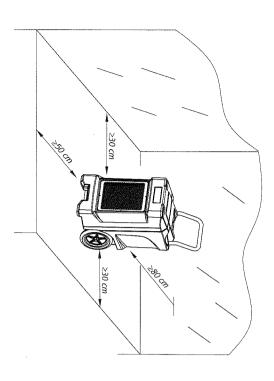

Correct position for best performance

Replacing the Battery

- 1. Remove the screws in the four corners of the control panel.
- 2. Once the screws are removed, carefully lift the control panel to access the PCB.
- 3. On the PCB is a 9V 6F22 battery. Remove the battery and replace with new.
- 4. Refit the control panel onto the PCB.
- Refit the four screws.

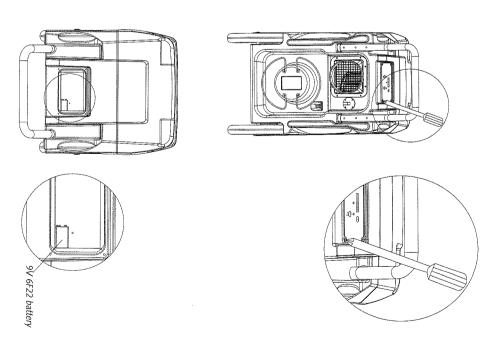

TROUBLE SHOOTING

The problems below are probably not actual faults. Please check the machine according to the tips:

Problem	Cause	Solution
Unit does not operate	Unit does not operate No power is connected to machine	Unplug the unit; and check the socket
	Unit is not turned on	Press the ON/OFF switch
	E4 is shown	Check water pipe
Unit collects little or	Not enough time for working	Allow more time for drying
no water at all	Filter is blocked	Clean the filter
	Indoor temperature is too low	The dehumidifying volume is
		little under low ambient tem-
		perature (≤18), thus try to in-
		crease the indoor temperature
	Water pipe is tied or deflated	Check water pipe
Poor dehumidification	Poor dehumidification The door or windows are open	Seal up the room
Hot air is drained	Normal heat exchange	Normal phenomenon
ווחווו חוב חחוובו		
Sound of water flow	Sound from refrigerant flowing	Normal Phenomenon
or 'da da' sound	or water pump working	


Notice: After checking the table above, if there is still a problem, please contact your retailer. Please do not attempt to dismantle or mend the machine by yourself.


FAULT CODES

Warning: In the event of a fault code, contact your retailer.

Code	FI	E2	E3	E4
Error	Coil sensor error	Coil sensor error Humidity sensor Low or no re-	Low or no re-	Water pump fault or
message		error	frigerant	blockage
Display	Flashes every 30	Flashes every 30	Flashes continu-	Flashes every 30 Flashes every 30 Flashes continually
reading	sec's	sec,s	ally	
Reason	Timed defrost	50% R.H	Turn power	Dehumidifier will turn
	mode. The	displayed con-	OFF. Then turn	OFF automatically.
	dehumidifier is	tinuous mode in ON again.	ON again.	The fault must be rec-
	working cor-	operation		tified before operation
	rectly			can commence.

 PRODUCT IDENTIFICATION



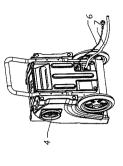

1. Metal handle

 
4. Air outlet grille, Ø 150 mm


6. Power cord 7. Water pipe

2. Control panel

3. Wheels

5. Air inlet grille

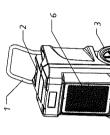

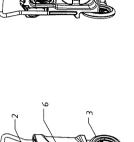

4. Water pipe bracket

7. Power cord 5. Air outlet grille, Ø 164 mm 6. Air inlet grille

2. Control panel

3. Wheels

1. Metal handle

8. Water pipe

NOTE: Please install the handle by yourself (six bolts are provided)

WARNING: DO NOT obstruct the air inlet or outlet.

IMPORTANT INSTRUCTIONS

Warning - to reduce the risk of fire, electrical shock or injury to persons or property:

- 1. Always operate the product from a power source of the same voltage, frequency and rating as indicated on product identification plate.
- Do not operate this product with a damaged power cord and/or plug. If the supply cord is damaged, it must be replaced by qualified personnel or other similar qualified person in order to avoid hazard.
- To reduce the risk of electric shock, do not expose the unit or flexible cord to wet conditions.
- Switch off and unplug the unit from the power socket when not in use, before assembling or before cleaning.
- 5. Do not place objects on product or allow objects to obstruct the inlet or outlet openings, or operate in close proximity to walls or curtains, etc.
- 6. Do not attempt to dismantle the appliance.
- 7. Do not operate the appliance on a metal surface.
- 8. Do not use the appliance in artificially hot or humid conditions or in a hazardous environment.
- 9. Do not clean the appliance with organic solvent.
- 10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 11. Children should not be left unsupervised with the appliance.
- 12. This instruction manual is an integral part of the appliance and should be stored for safe keeping and must always accompany the appliance in the event of ownership transfer or for reference to by service engineer.



PLEASE READ THE INSTRUCTIONS CAREFULLY AND IN FULL BEFORE USING THE PRODUCT.


TECHNICAL SPECIFICATIONS


A CONTRACTOR OF THE PROPERTY O		
Model	BR55C	BR85C
Moisture Removal Canacity	55L/day(30°C RH80%)	85L/day(30°C RH80%)
and the second supports	30L/day(27°C RH60%)	50L/day(27°C RH60%)
Power Supply	220-240V~ 50Hz	220-240V~ 50Hz
Rated Power	720W	M066
Rated Current	3.2A	4.7A
Max Power	950W	1370W
Max Current	4.2A	6.4A
Max Suction Pressure	2.5MPa	2.5MPa
Max Discharge Pressure	4.5MPa	4.5MPa
Refrigerant	R410A/0.4kg	R410A/0.74kg
Operating Temperature	5~35°C	5~35°C
Net Weight	39 kg	45 kg
Product Size	545×500×638 mm	530×515×830 mm



INDUSTRIAL DEHUMIDIFIER

MODEL: BR55C/BR85C

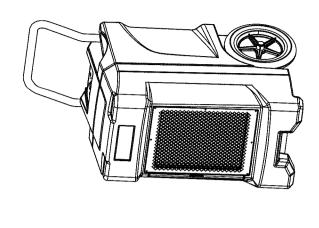

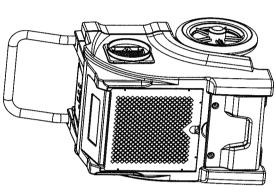

INSTRUCTION MANUAL
SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE