



16" VENTILATION FAN

MODEL NO: CAM400 (230V)

PART NO: 3230240

OPERATION & MAINTENANCE INSTRUCTIONS



ORIGINAL INSTRUCTIONS

DL0722 - ISS 3

INTRODUCTION

Thank you for purchasing this CLARKE Ventilation Fan which is designed for indoor use in an industrial environment.

Read this manual carefully, in doing so you guarantee the safety of yourself and that of others around you, and you can look forward to your purchase giving you long and satisfactory service.

SAFETY RULES

Make sure that you read, understand and comply with the following rules.

POSITIONING

This fan is designed for indoor use only.

Be aware that the suction capability is considerable. Do not position the fan where it will blow dust, chips or hazardous fumes at people.

DO NOT place the fan close to any wet surface. DO NOT place against any surface such as a wall, door or furniture etc.

DO NOT place the fan on a raised surface or anywhere it could topple over.

Only use the fan in a level position.

Take care to ensure that the intake grille cannot be blocked by curtains or other fabrics. Do not allow loose clothing, long hair, jewellery etc. to be drawn into the intake side of the fan.

DO NOT operate the fan in explosive atmospheres such as in the presence of flammable liquids, gases or dust such as in a paint spray booth. Electric motors create sparks which may ignite dust or fumes.

DO NOT cover the fan or obstruct the air inlet and outlet sections of the ventilator.

DO NOT get the fan wet or use in areas of high condensation.

DO NOT allow the power cable to touch hot surfaces.

ALWAYS make sure the brakes are engaged before operating.

DO NOT operate without the safety grills secured in position.

PERSONNEL SAFETY

DO NOT use the fan when you are tired or under the influence of alcohol, drugs or intoxicating medication.

DO NOT stand on the fan.

DO NOT use with wet hands or when there is water on the power cable.

Young children must be kept away unless continuously supervised.

ELECTRICAL SAFETY

Inspect the power cable/plug for damage/looseness. Do not use the fan if the power cable is damaged.

Make sure that the voltage on the product label is the same as the voltage of the power supply. If in doubt, consult a qualified electrician.

DO NOT abuse the electrical cable. Do not use the cable for pulling or unplugging the fan.

Keep the cable away from sources of heat, oil, sharp edges or moving parts. Damaged or tangled cables increase the risk of electric shock.

DO NOT use extension cables with this fan.

SERVICE & REPAIRS

Check that the fan is in good working order. Take immediate action to have it repaired or any damaged parts replaced.

DO NOT attempt to repair the fan yourself. Always contact the Clarke service department who will use recommended parts only. Unapproved parts may be dangerous and will invalidate your warranty.

ENVIRONMENTAL RECYCLING POLICY



By purchasing this product, the customer is taking on the obligation to deal with its safe disposal in accordance with the Waste Electrical and Electronic Equipment regulations (WEEE).

In effect, this means that this product must not be discarded with general household waste but according to the laws governing Waste Electrical and Electronic Equipment (WEEE) at a recognized disposal facility.

GUARANTEE

This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt as proof of purchase. This guarantee is invalid if the product is found to have been abused, tampered with, or not used for the purpose for which it was intended.

Faulty goods must be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

ELECTRICAL CONNECTIONS



WARNING: READ THESE ELECTRICAL SAFETY INSTRUCTIONS THOROUGHLY BEFORE CONNECTING THE PRODUCT TO THE MAINS SUPPLY.

Connect the mains lead to a standard, 230 Volt (50Hz) electrical supply through an approved BS 1363 plug or a suitably fused isolator switch.

If the plug has to be changed because it is not suitable for your socket, or because of damage, it must be removed and a replacement fitted, following the wiring instructions shown below. The old plug must be discarded safely, as insertion into a power socket could cause an electrical hazard.




WARNING: THE WIRES IN THE POWER CABLE OF THIS PRODUCT ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE:

BLUE = NEUTRAL BROWN = LIVE YELLOW AND GREEN = EARTH

If the colours of the wires in the power cable do not agree with the markings on the plug.

- Connect the BLUE wire to the terminal marked N.
- Connect the BROWN wire to the terminal marked L.
- Connect the YELLOW AND GREEN wire to the terminal marked E or \(\pm\).

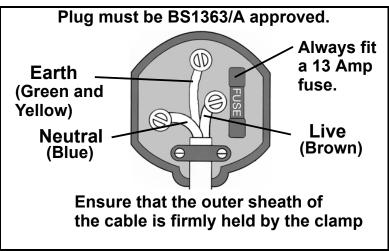

AN APPROVED RESIDUAL

CURRENT DEVICE (RCD) WHICH HAS A TRIPPING CURRENT OF LESS THAN 30 mA

MUST BE USED.

If you are not sure, consult a qualified electrician. DO NOT try to do any repairs yourself.

BEFORE USE

Before commencing assembly, check for damage and or shortages etc, any damage or shortage should be reported to your Clarke dealer where the fan was purchased.

Your ventilation fan should be supplied with the following parts:

- 4 x castors (2 with brakes)
- 16 bolts, 16 nuts, 16 spring washers and 32 flat washers.

Bolt the castor assemblies to the frame as shown using the fastenings supplied. Install the castors with brakes at one end of the frame.

This ventilator can be used with CLARKE 16" diameter retractable ducting available in 5 metre lengths as follows:

Orange (3230241) or Yellow (3230484)

 Before use, attach the ducting to the discharge end of the ventilator as shown, secured with the tie cord provided.

2. Place the ventilator in a level

- position on a flat surface and at a safe distance from flammable materials.
- 3. Connect the ventilator to a suitable power outlet. The ventilator is operated by the ON/OFF switch.
- 4. Set the angle of tilt as required using the hand knob shown.
- 5. Always apply the brakes before operating the ventilator.

CARE & MAINTENANCE




WARNING: ALWAYS DISCONNECT FROM THE POWER SUPPLY BEFORE PERFORMING ANY CLEANING OR MAINTENANCE TASKS. REPAIRS SHOULD BE CARRIED OUT BY THE CLARKE SERVICE DEPARTMENT.

Clean the with a soft damp cloth, Do not use solvents or abrasives.

If used in spaces with high dust content, clean the guards and fan blades by vacuuming or wiping. Remove the end guard to gain access to the blades by removing the four securing screws.

REPLACE GUARDS BEFORE RE-CONNECTING TO MAINS SUPPLY.



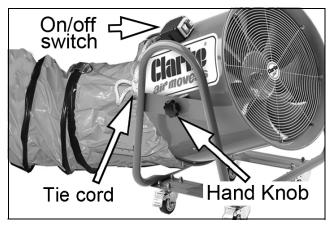

No other maintenance is required, should you discover any problem with the ventilation fan return it to the CLARKE service department for repair.

Should the fan fail to operate, check the power supply and that the fuse in the plug has not blown. Abnormal noise while the fan is running may occur if the fan is not standing on a level surface.

SPECIFICATIONS

Model	CAM400
Product dimensions	575 x 435 x 770 mm
Air Inlet Size	16 inch
Drum diameter	480 mm
Fan diameter	395 mm
Swivel/tilt range	360°
Product Weight	37 kg
Operating temperature	10 - 40°C
Power supply	230V/50Hz
Duty Cycle Classification:	S1 (continuous)
Ingress protection class	IP54
Electrical insulation class	I
Fan speed@optimum efficiency	2800 rpm
Rated airflow: (m³/h)	63 m ³ /m (3796 m ³ /h)
Total Pressure	700 Pa
Static pressure	436 Pa
Rated motor input power	1200 W
Overall efficiency	59.52%
Measurement catagory	С
Efficiency catagory (static/total)	Static
Efficiency Grade (at optimum energy point)	40
Guaranteed Sound Power Level	79 dB
Specific Ratio (EU no 327/2011)	N/A

DECLARATION OF CONFORMITY





lemnall Street, Epping, Essex CM16 4LG

DECLARATION OF CONFORMITY

This is an important document and should be retained.

We hereby declare that this product(s) complies with the following statuary requirement(s):

Electrical Equipment (Safety) Regulations 2016.

Electromagnetic Compatibility Regulations 2016.

The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012.

The Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2020.

The following standards have been applied to the product(s):

BS EN 60034-1:2010, BS EN 60034-5:2001+A1:2007, BS EN 55014-1:2006/A2:2011,

BS EN 61000-3-3:2013. BS EN ISO 12100:2010. IEC 62321-3-1:2013, IEC 62321-6:2015, BS EN 55014-1:2017, BS EN 55014-2:1997/A2:2008, BS EN 55014-2:2015, BS EN 61000-3-2:2014,

IEC 62321-7-1:2015, IEC 62321-7-2:2017, BS EN ISO 17075-1:2017,

The technical documentation required to demonstrate that the product(s) meet(s) the requirement(s) of the afformationed legislation has been compiled and is available for inspection by the relevant enforcement

The UKCA mark was first applied in: 2022

CAM400, CAM500

16inch, 20inch - Ventilators

Date of Issue: Serial / batch Number: Model number(s): Product Description:

22/06/2022

J.A. Clarke

Signed:

Director

CAM400 UKCA Clarke DOC 062222

Page I of I

CAM400 CE Clarke DOC 062722



DECLARATION OF CONFORMITY

This is an important document and should be retained.

We hereby declare that this product(s) complies with the following directive(s):

2014/35/EU 2014/30/EU Low Voltage Equipment Directive. Electromagnetic Compatibility Directive.

2009/125/EC Eco-design Requirements Directive. Restriction of Hazardous Substances (RoHS)

2011/65/EU

The following standards have been applied to the product(s):

EN 60034-1:2010, EN 60034-5:2001+A1:2007, EN 55014-1:2006/A2:2011, EN 55014-1:2017, EN 55014-2:1997/A2:2008, EN 55014-2:2015, EN 61000-3-2:2014, EN 61000-3-3:2013.

EN ISO 12100:2010. IEC 62321-3-1:2013, IEC 62321-6:2015, IEC 62321-7-1:2015, IEC 62321-7-2:2017, EN ISO 17075-1:2017.

The technical documentation required to demonstrate that the product(s) meet(s) the requirement(s) of the aforementioned directive(s) has been compiled and is available for inspection by the relevant enforcement authorities.

The CE mark was first applied in: 2019

Model number(s): Product Description: CAM400, CAM500 16inch, 20inch - Ventilators

27/06/2022

N A

Date of Issue: Serial / batch Number:

Signed:

J.A. Clarke

Director

Page 1 of 1

A SELECTION FROM THE VAST RANGE OF





AIR COMPRESSORS

From DIY to industrial, Plus air tools, spray guns and accessories.

GENERATORS

Prime duty or emergency standby for business, home and leisure.

POWER WASHERS

Hot and cold, electric and engine driven - we have what you need

WELDERS

Mig, Arc, Tig and Spot. From DIY to auto/industrial.

METALWORKING

Drills, grinders and saws for DIY and professional use.

WOODWORKING

Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS

Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS

Submersible, electric and engine driven for DIY, agriculture and industry.

POWER TOOLS

Angle grinders, cordless drill sets, saws and sanders.

STARTERS/CHARGERS

All sizes for car and commercial use.





Parts Enquiries
Parts@clarkeinternational.com

Servicing & Technical Enquiries
Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

CIAPE INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG www.clarkeinternational.com